

Gladkokken

MULTI COOKER 3L

BRUKSANVISNING GK - 1583
INSTRUCTION MANUAL GK - 1583




Jeg elsker å spre matglede

Derfor har jeg laget kjøkkenredskaper jeg selv liker å bruke – som gjør det lettere å lykkes med matlagingen. Med kvalitetsprodukter blir kjøkkenet et sted det er gøy å være.



● Produktdeler

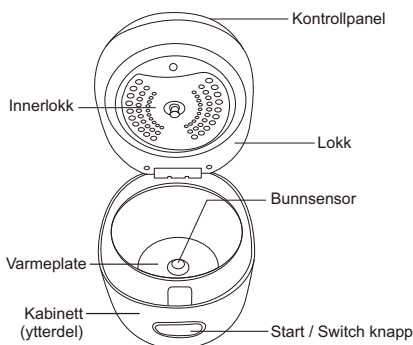


※Se det faktiske produktet for nøyaktige detaljer.


● Produktinformasjon

Produktnavn:	Multi Cooker 3L
Modell:	GK-1583
Kapasitet:	3L
Spenning:	220-240V~
Frekvens:	50/60Hz
Effekt:	500W

● Krettsdiagram

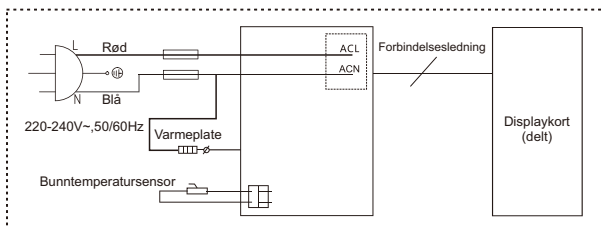

● Funksjonsknapper – Bruk og betjening

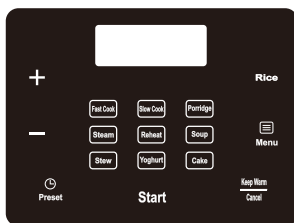

1. “Start”-knapp

Når strømmen kobles til, lyser “Start”-lampen.

Trykk på knappen for å slå på displayet og gå til standby-modus.

Hvis ingen knapper trykkes i løpet av 30 sekunder, slår skjermen seg av, og kun “Start”-lampen lyser.

2. “Menu”-knapp

I standby-modus trykker du på knappen for å velge et program:

Fast Cook, Slow Cook, Porridge, Steam, Reheat, Soup, Stew, Yogurt eller Cake.

Når du har valgt et program, trykk på “Start”-knappen for å starte.

Når tilberedningen starter, lyser både programlampen og “Keep Warm/Cancel”-lampen.

Når programmet er ferdig, høres det 3 pip, og apparatet går automatisk over til hold varm-funksjon.

3. “Keep Warm / Cancel”-knapp

Trykk på knappen under bruk for å stoppe programmet og gå tilbake til standby-modus.

I standby-modus kan du trykke på knappen for å aktivere hold varm-funksjonen.

Merk:

Hold varm-temperaturen er ca. 60–65°C og kan vare i opptil 24 timer.

En nedtelling vises på displayet.

Hvis omgivelsene er varme, bør maten ikke holdes varm for lenge, da den kan bli dårlig.

4. “Preset”-knapp

Når du har valgt et program, kan du trykke på denne knappen for å stille inn forsinket start.

Apparatet starter automatisk på det valgte tidspunktet.

5. “+ / –”-knapper

Bruk disse knappene til å justere tilberedningstiden (minutter).

6. “Rice”-knapp

I standby-modus trykker du på denne knappen og deretter på “Start” for å starte tilberedningen med en gang.

Ris-til-vann-tabell

No.	Funksjon	Forhold	Forhold	Forhold	Merknader
1	Rice (Tradisjonell ris)	6 kopper ris + 7,2 kopper vann	7 kopper ris + 8,4 kopper vann	8 kopper ris + 9,6 kopper vann	①Mål vannet etter at risen er skylt. Bruk målebegeret og innergryten. ②Ikke åpne lokket under tilberedning
2	Hurtig tilberedning	1 kopp ris + 1,2 kopp vann	2 kopper ris + 2,4 kopper vann		
3	Standard tilberedning	3 kopper ris + 3,6 kopper vann	4 kopper ris + 4,8 kopper vann	5 kopper ris + 6 kopper vann	
4	Grøt	0,5 kopp ris + 4 kopper vann	1 kopp ris + 8 kopper vann	1,2 kopper ris + 10 kopper vann	

Merknader: 1. Bruk Hurtig tilberedning når du lager opptil 2 kopper ris.
Bruk Standard tilberedning når du lager mer enn 2 kopper.

2. Forholdet mellom ris og vann er kun veiledende.
Du kan justere det etter smak og type ris.

3. Apparatet skal brukes med en spenning på 220V-240V~.
For høy eller for lav spenning kan føre til dårlig kokt ris eller at det koker over.

Målebeger



Merk: Bruk det medfølgende målebegeret.
Fyll det jevnt (ikke med topp) for korrekt måling.

● Slik bruker du funksjonene

1. Hurtig tilberedning

Bruk målebegeret til å måle opp ønsket mengde ris.
Skyll risen og legg den i innergryten.
Tilsett vann i henhold til ris-til-vann-tabellen, og lukk lokket.

I standby-modus trykker du på "Menu"-knappen og velger Hurtig tilberedning, og trykker deretter på "Start".
Programmet starter (indikatorlyset beveger seg over panelet).

Tilberedningstiden er cirka 30–35 minutter.
Tiden kan ikke justeres og kan variere avhengig av mengden ris, spenning og romtemperatur.

Når tilberedningen er ferdig, høres det 3 pip, og apparatet går automatisk over til hold varm-funksjon.

Hvis du ikke ønsker å holde risen varm, trykk på "Keep Warm/Cancel".

2. Slow tilberedning

Bruk målebegeret til å måle opp ønsket mengde ris.
Skyll risen og legg den i innergryten.
Tilsett vann i henhold til ris-til-vann-tabellen, og lukk lokket.

I standby-modus velger du Slow Cook, og trykker deretter på "Start".
Programmet starter (indikatorlyset beveger seg over panelet).

Tilberedningstiden er cirka 35–50 minutter.
Tiden kan ikke justeres og kan variere avhengig av mengden ris, spenning og romtemperatur.

Når tilberedningen er ferdig, høres det 3 pip, og apparatet går automatisk over til hold varm-funksjon.

Hvis du ikke ønsker å holde risen varm, trykk på "Keep Warm/Cancel".

3. Grøt

Bruk målebegeret til å måle opp ønsket mengde ris.
Skyll risen og legg den i innergryten.
Tilsett vann i henhold til ris-til-vann-tabellen, og lukk lokket.

I standby-modus trykker du på "Menu"-knappen og velger Porridge, og trykker deretter på "Start".
Displayet viser en nedtelling.

Standard tilberedningstid er 1 time og 30 minutter.
Tiden kan justeres fra 30 minutter til 4 timer og 30 minutter.

Når tilberedningen er ferdig, høres det 3 pip, og apparatet går automatisk over til hold varm-funksjon.
Hvis du ikke ønsker å holde grøten varm, trykk på "Keep Warm/Cancel".

4. Damp

Tilsett 3–4 kopper vann i innergryten.
Plasser dampinnsatsen og tilsett ingrediensene. Lukk lokket.

I standby-modus velger du Damp, og trykker deretter på "Start".
Displayet viser en nedtelling.

Standardtiden er 1 time.
Tiden kan justeres fra 10 minutter til 2 timer.

Når tilberedningen er ferdig, høres det 3 pip, og apparatet går automatisk over til hold varm-funksjon.
Trykk på "Keep Warm/Cancel" hvis du ikke ønsker dette.

5. Oppvarming

Legg kald ris i innergryten og tilsett ca. 1 kopp kokende vann.
Lukk lokket.

I standby-modus velger du Oppvarming, og trykker deretter på "Start".
Displayet viser en nedtelling.

Standardtiden er 15 minutter.
Tiden kan justeres fra 10 minutter til 1 time.

Når tilberedningen er ferdig, høres det 3 pip, og apparatet går automatisk over til hold varm-funksjon.
Trykk på "Keep Warm/Cancel" hvis du ikke ønsker dette.

6. Suppe

Tilsett vann og ingredienser i innergryten, og lukk lokket.

I standby-modus velger du Suppe, og trykker deretter på "Start".
Displayet viser en nedtelling.

Standardtiden er 1 time og 30 minutter.
Tiden kan justeres fra 30 minutter til 4 timer og 30 minutter.

Når tilberedningen er ferdig, høres det 3 pip, og apparatet går automatisk over til hold varm-funksjon.
Trykk på "Keep Warm/Cancel" hvis du ikke ønsker dette.

7. Gryterett

Tilsett ingredienser og vann i innergryten, og lukk lokket.

I standby-modus velger du Gryterett, og trykker deretter på "Start".
Displayet viser en nedtelling.

Standardtiden er 1 time.
Tiden kan justeres fra 1 time til 4 timer.

Når tilberedningen er ferdig, høres det 3 pip, og apparatet går automatisk over til hold varm-funksjon.
Trykk på "Keep Warm/Cancel" hvis du ikke ønsker dette.

8. Yoghurt

Tilsett de forberedte ingrediensene i innergryten og lukk lokket.

I standby-modus velger du Yoghurt, og trykker deretter på "Start".
Displayet viser en nedtelling.

Standardtiden er 8 timer.
Tiden kan justeres fra 6 til 12 timer.

Når programmet er ferdig, høres det 3 pip.
Apparatet går ikke over til hold varm-funksjon for å unngå at maten blir dårlig.

9. Dampkake

Tilsett de forberedte ingrediensene i innergryten og lukk lokket.

I standby-modus velger du Dampkake, og trykker deretter på "Start".
Displayet viser en nedtelling.

Standardtiden er 40 minutter.

Tiden kan justeres fra 40 minutter til 1 time.

Når tilberedningen er ferdig, høres det 3 pip, og apparatet går automatisk over til hold varm-funksjon.

Trykk på "Keep Warm/Cancel" hvis du ikke ønsker dette.

10. Tradisjonell ris

Tilsett skylte ris og vann (se ris-til-vann-tabellen) i innergryten.
Lukk lokket.

I standby-modus velger du Tradisjonell ris, og trykker deretter på "Start".
Programmet starter (indikatorlyset beveger seg over panelet).

Tilberedningstiden er cirka 45–55 minutter.

Tiden kan ikke justeres og kan variere avhengig av mengden ris, spenning og romtemperatur.

Når tilberedningen er ferdig, høres det 3 pip, og apparatet går automatisk over til hold varm-funksjon.

Trykk på "Keep Warm/Cancel" hvis du ikke ønsker dette.

● Rengjøring og vedlikehold

1. Ta ut innergryten og vask den med mildt oppvaskmiddel.
Tørk den med en myk klut.
2. Tørk av utsiden av apparatet med en ren, myk klut etter hver bruk.
3. Fjern ris eller smuss fra varmeplaten.
Dette sikrer god kontakt mellom innergryten og varmeplaten.
4. Rengjør innerlokket og tetningsringen med en myk klut etter hver bruk.
5. Ikke bruk metallbørster eller skuremidler på innergryten, da dette kan skade overflaten.
6. Når apparatet ikke er i bruk, skal det være tørt og oppbevares på et tørt sted.
7. Trekk alltid ut støpselet før rengjøring.
Sørg for at stikkontakten er tørr før apparatet brukes igjen.

● Sikkerhetsregler

1. Dette apparatet må ikke brukes av barn.
Hold barn unna under bruk.
2. Senk aldri apparatet ned i vann.
Dette kan føre til elektrisk støt eller kortslutning.
3. Ikke stikk metallgjenstander (for eksempel nåler eller ledninger) inn i åpninger eller sprekker.
Dette kan føre til elektrisk støt.
4. Ikke sett i eller trekk ut støpselet med våte hender.
Hold alltid i støpselet – ikke trekk i ledningen.
Unngå å vri eller trekke hardt i ledningen.
5. Hold strømledningen borte fra varmekilder for å unngå overoppheting eller brann.
Trekke alltid ut støpselet etter bruk.
6. Rengjør støpselet jevnlig for støv og smuss.
Dette sikrer god elektrisk kontakt.
7. Bruk en stikkontakt på 10A eller mer.
Sørg for at støpselet er satt helt inn.
8. Hold hender og ansikt borte fra dampåpningen under bruk.
Ikke dekk til åpningen, da dette kan skade lokket.
9. Ikke ta på lokket eller metalldeler under eller rett etter bruk.
De kan være svært varme.
Ikke åpne lokket mens du flytter apparatet.
10. Plasser apparatet kun på en stabil og varmebestandig overflate.
11. Hold apparatet borte fra ild og fuktige omgivelser.
12. Sørg før bruk for at varmeplaten, temperatursensoren og bunnen av innergryten er rene og tørre.
13. Unngå å slå eller miste innergryten.
Dette kan skade den og påvirke funksjonen.
14. Ikke bruk skurebørster eller sterke rengjøringsmidler.
Misfarging etter bruk er normalt og påvirker ikke hygien.
15. Ikke sett innergryten på andre varmekilder.
Ikke bruk andre gryter i apparatet, da dette kan føre til overoppheting eller skade.
16. Ikke slå på apparatet uten innergryten eller uten mat/vann i.
17. Varmeplaten er fortsatt varm etter bruk.
Ikke ta på den.
18. Ikke demonter apparatet selv.
19. Hvis strømledningen er skadet, må den byttes ut av en kvalifisert fagperson.
20. Ikke fyll over maks.-merket i innergryten.
Dette kan føre til at innholdet koker over.
21. Bruk den medfølgende risskjeen eller et redskap av tre.
Ikke bruk metallredskaper, da de kan skade innergryten.
Ikke bruk innergryten på andre komfyrer.
22. Kontroller før bruk at støpsel og ledning ikke er skadet.
23. Hold brennbare materialer borte fra støpselet under bruk.
24. Ikke senk apparatet i vann eller andre væsker ved rengjøring.

● Feilsøking


Problem	Mulig årsak	Løsning
Indikatorlampen er av, og varmeplaten varmer ikke	1.Strøm ikke riktig tilkoblet 2.Strømkrets kort defekt 3.Ledning skadet 4.Kontrollkort defekt	1.Kontroller bryter, støpselet, stikkontakt og sikring. Sørg for at støpselet er satt helt i. 2, 3, 4: Send til autorisert servicesenter
Indikatorlampen er på, men varmeplaten varmer ikke	1.Sensorfeil 2.Varmeelement defekt 3.Ledning skadet 4.Strømkrets kort defekt	Send til autorisert servicesenter
Ris er brent, eller hold varm fungerer ikke riktig	1.Kontrollkort defekt 2.Sensorfeil	Send til autorisert servicesenter
Grøt koker over	1.Feil funksjon valgt 2.Kontrollkort defekt 3.Sensorfeil	1.Velg riktig funksjon og prøv igjen 2, 3: Send til autorisert servicesenter
Ris eller grøt koker ikke på lang tid	1.Kontrolprint defekt 2.Sensorfeil	Send til autorisert servicesenter
Ris er ikke ferdig eller tar for lang tid	1.For kort tilberedningstid 2.Innergryten er ikke plassert riktig 3.Kontrollkort defekt	1.Følg instruksjonene og bruk riktig vannforhold 2.Sørg for at innergryten er plassert korrekt 3.Send til autorisert servicesenter
Feil E1	Feil i bunnsensor	Send til autorisert servicesenter
Feil E2	Bunnsensor overopphetet eller kort	Trekk ut støpselet og la apparatet kjøle seg ned før det kobles til igjen. Hvis det fortsatt ikke virker, send til autorisert servicesenter

● Sorteringsveiledning

Elektrisk og elektronisk utstyr inneholder materialer, komponenter og stoffer som kan være farlige og skadelige for menneskers helse og for miljøet når avfall av elektrisk og elektronisk utstyr (WEEE) ikke håndteres riktig. Produkter som er merket med «overkrysset søppelbøtte», er elektrisk og elektronisk utstyr. Den overkryssede søppelbøtten symboliserer at avfall av elektrisk og elektronisk utstyr ikke må kastes sammen med usortert husholdningsavfall, men skal samles inn separat. For dette formålet har alle kommuner etablert innsamlingsordninger hvor avfall av elektrisk og elektronisk utstyr gratis kan leveres av innbyggerne på gjenvinningsstasjoner eller andre innsamlingssteder, eller hentes direkte fra husholdningene. Nærmere informasjon skal innhentes hos kommunens tekniske forvaltning.



● Parts Names

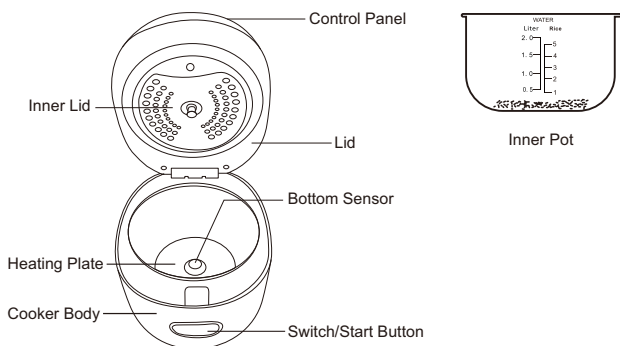


※Please refer to the actual product for specific illustrations.

● Product Parameters

Product Name:	Multi Cooker 3L
Model:	GK-1583
Rated Capacity:	3L
Rated Voltage:	220-240V~
Rated Frequency:	50/60Hz
Rated Power:	500W

● Circuit Diagram

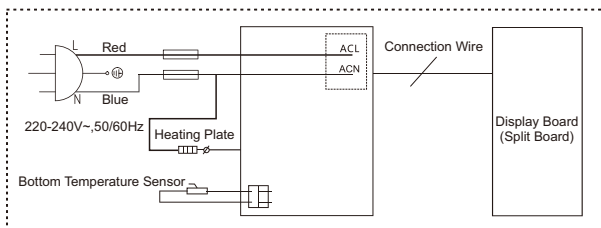

● Function Button – Operation and Usage Instructions



1. “Start” Button

After connecting the power, the “Start” light turns on.

Press this button to turn on the display and enter standby mode.

If no button is pressed for 30 seconds, the screen will turn off and only the “Start” light will remain on.

2. “Menu” Button

In standby mode, press this button to select a program:

Fast Cook, Slow Cook, Porridge, Steam, Reheat, Soup, Stew, Yogurt, or Cake.

After selecting a function, press the “Start” button to begin.

When cooking starts, the selected function light and the “Keep Warm/Cancel” light will turn on. When the program is finished, the buzzer will sound 3 times, and the device will automatically switch to Keep Warm mode.

3. “Keep Warm / Cancel” Button

Press this button during operation to stop the current program and return to standby mode.

In standby mode, press this button to activate Keep Warm mode.

Note:

Keep Warm temperature is approximately 60–65°C and can run for up to 24 hours.

A countdown will be shown on the display.

If the room temperature is high, do not keep food warm for too long, as it may spoil.

4. “Preset” Button

After selecting a function, press this button to set a delayed start time.

The device will start automatically at the selected time.

5. “+ / –” Buttons

Use these buttons to adjust the cooking time (minutes).

6. “Rice” Button

In standby mode, press this button and then press “Start” to begin cooking immediately.

Rice-to-Water Ratio Table

No.	Function Key	Ratio	Ratio	Ratio	Remarks
1	Rice	6 cups rice + 7.2 cups water	7 cups rice + 8.4 cups water	8 cups rice + 9.6 cups water	①Measure the water after rinsing the rice. Use the provided measuring cup and the inner pot. ②Do not open the lid while cooking.
2	Fast Cook	1 cup rice + 1.2 cups water	2 cups rice + 2.4 cups water		
3	Slow Cook	3 cups rice + 3.6 cups water	4 cups rice + 4.8 cups water	5 cups rice + 6 cups water	
4	Porridge	0.5 cup rice + 4 cups water	1 cup rice + 8 cups water	1.2 cups rice + 10 cups water	

Remarks: 1. Use "Fast Cook" when cooking up to 2 cups of rice.
Use "Slow Cook" when cooking more than 2 cups.

2. The water-to-rice ratio is only a guideline.
You can adjust it depending on your taste and the type of rice.

3. The appliance should be used with a voltage between 220V-240V~.
Voltage that is too high or too low may result in undercooked rice or cause it to boil over.

Measuring Cup



Note: Use the provided measuring cup. Fill it level (not heaped) for accurate measurement.

● How to Use Each Function

1. Fast Cook

Use the measuring cup to add the desired amount of rice.

Rinse the rice and place it in the inner pot.

Add water according to the *Rice-to-Water Ratio Table*, then close the lid.

In standby mode, press the "Menu" button and select Fast Cook, then press "Start".

The program will begin (indicator light will run across the panel).

Cooking time is approximately 30–35 minutes.

The time cannot be adjusted and may vary depending on the amount of rice, voltage, and room temperature.

When cooking is finished, the appliance will beep 3 times and switch to Keep Warm mode automatically.

If you do not want to keep the rice warm, press "Keep Warm/Cancel".

2. Slow Cook

Use the measuring cup to add the desired amount of rice.

Rinse the rice and place it in the inner pot.

Add water according to the *Rice-to-Water Ratio Table*, then close the lid.

In standby mode, select Slow Cook, then press "Start".

The program will begin (indicator light will run across the panel).

Cooking time is approximately 35–50 minutes.

The time cannot be adjusted and may vary depending on the amount of rice, voltage, and room temperature.

When cooking is finished, the appliance will beep 3 times and switch to Keep Warm mode automatically.

If you do not want to keep the rice warm, press "Keep Warm/Cancel".

3. Porridge

Use the measuring cup to add the desired amount of rice.

Rinse the rice and place it in the inner pot.

Add water according to the *Rice-to-Water Ratio Table*, then close the lid.

In standby mode, press the "Menu" button and select Porridge, then press "Start".

The display will show a countdown.

Default cooking time is 1 hour 30 minutes.

You can adjust the time from 30 minutes to 4 hours 30 minutes.

When cooking is finished, the appliance will beep 3 times and switch to Keep Warm mode automatically.

If you do not want to keep the porridge warm, press "Keep Warm/Cancel".

4. Steam

Add 3–4 cups of water to the inner pot.

Place the steamer inside and add your ingredients. Close the lid.

In standby mode, select Steam and press "Start".

The display will show a countdown.

Default time is 1 hour.

You can adjust the time from 10 minutes to 2 hours.

When finished, the appliance will beep 3 times and switch to Keep Warm mode.

Press "Keep Warm/Cancel" if you do not want this.

5. Reheat

Place cold rice in the inner pot and add about 1 cup of boiling water.

Close the lid.

In standby mode, select Reheat and press "Start".

The display will show a countdown.

Default time is 15 minutes.

You can adjust the time from 10 minutes to 1 hour.

When finished, the appliance will beep 3 times and switch to Keep Warm mode.

Press "Keep Warm/Cancel" if you do not want this.

6. Soup

Add water and ingredients to the inner pot, then close the lid.

In standby mode, select Soup and press "Start".

The display will show a countdown.

Default time is 1 hour 30 minutes.

You can adjust the time from 30 minutes to 4 hours 30 minutes.

When finished, the appliance will beep 3 times and switch to Keep Warm mode.

Press "Keep Warm/Cancel" if you do not want this.

7. Stew

Add ingredients and water to the inner pot, then close the lid.

In standby mode, select Stew and press "Start".

The display will show a countdown.

Default time is 1 hour.

You can adjust the time from 1 hour to 4 hours.

When finished, the appliance will beep 3 times and switch to Keep Warm mode.

Press "Keep Warm/Cancel" if you do not want this.

8. Yogurt

Add the prepared ingredients to the inner pot and close the lid.

In standby mode, select Yogurt and press "Start".

The display will show a countdown.

Default time is 8 hours.

You can adjust the time from 6 to 12 hours.

When finished, the appliance will beep 3 times.

It will NOT switch to Keep Warm mode, to prevent spoilage.

9. Cake

Add the prepared ingredients to the inner pot and close the lid.

In standby mode, select Cake and press "Start".

The display will show a countdown.

Default time is 40 minutes.

You can adjust the time from 40 minutes to 1 hour.

When finished, the appliance will beep 3 times and switch to Keep Warm mode.

Press "Keep Warm/Cancel" if you do not want this.

10. Rice

Add rinsed rice and water (see Rice-to-Water Ratio Table) to the inner pot.

Close the lid.

In standby mode, select Rice and press "Start".

The program will begin (indicator light will run across the panel).

Cooking time is approximately 45–55 minutes.

The time cannot be adjusted and may vary depending on the amount of rice, voltage, and room temperature.

When finished, the appliance will beep 3 times and switch to Keep Warm mode.

Press "Keep Warm/Cancel" if you do not want this.

● Cleaning and Maintenance

1. Remove the inner pot and wash it with mild detergent.
Dry it with a soft cloth.
2. After each use, wipe the outside of the appliance with a clean, soft cloth.
3. Remove any rice or dirt from the heating plate.
This ensures good contact between the inner pot and the heating plate.
4. Clean the inner lid and sealing ring with a soft cloth after each use.
5. Do not use metal brushes or abrasive cleaners on the inner pot, as this may damage the surface.
6. When not in use, make sure the appliance is dry and store it in a dry place.
7. Always unplug the appliance before cleaning.
Make sure the power socket is dry before using it again.

● Safety Precautions

1. This appliance must not be used by children.
Keep children away during use.
2. Never immerse the appliance in water.
This may cause electric shock or short circuits.
3. Do not insert metal objects (such as needles or wires) into openings or gaps.
This may cause electric shock.
4. Do not plug in or unplug the appliance with wet hands.
Always hold the plug – do not pull the cord.
Do not twist or pull the cord forcefully.
5. Keep the power cord away from heat sources to prevent overheating or fire.
Always unplug the appliance after use.
6. Clean the plug regularly to remove dust and dirt.
This ensures good electrical contact.
7. Use a power outlet rated at 10A or higher.
Make sure the plug is fully inserted.
8. Keep hands and face away from the steam vent during use.
Do not cover the vent, as this may damage the lid.
9. Do not touch the lid or metal parts during or immediately after use.
They may be very hot.
Do not open the lid while carrying the appliance.
10. Place the appliance on a stable, heat-resistant surface only.
11. Keep the appliance away from fire sources and humid areas.
12. Before use, make sure the heating plate, temperature sensor, and bottom of the inner pot are clean and dry.
13. Do not hit or drop the inner pot.
This may damage it and affect performance.
14. Do not use abrasive brushes for cleaning.
Color changes after use are normal and do not affect hygiene.
15. Do not place the inner pot on other heat sources.
Do not use other pots in the appliance, as this may cause overheating or damage.
16. Do not turn on the appliance without the inner pot or without food or water inside.
17. The heating plate remains hot after use.
Do not touch it.
18. Do not disassemble the appliance yourself.
19. If the power cord is damaged, it must be replaced by a qualified technician.
20. Do not fill above the maximum water level mark inside the inner pot.
This may cause overflow.
21. Use the included rice spoon or a wooden utensil.
Do not use metal utensils, as they may damage the inner pot.
Do not use the inner pot on other stoves.
22. Before use, check that the plug and power cord are not damaged.
23. Keep flammable items away from the power plug during use.
24. Do not immerse the appliance in water or any other liquid when cleaning.

● Troubleshooting

Problem	Possible Cause	Solution
Indicator light is off, and the heating plate does not heat	1.Power not connected properly 2.Power board damaged 3.Connection wire damaged 4.Control board damaged	1. Check the power switch, plug, socket, and fuse. Make sure the plug is fully inserted 2, 3, 4: Send to authorized service center
Indicator light is on, but the heating plate does not heat	1.Sensor fault 2.Heating element damaged 3.Connection wire damaged 4.Power board damaged	Send to authorized service center
Rice is burnt or Keep Warm does not work properly	1.Control board damaged 2.Sensor fault	Send to authorized service center
Porridge overflows	1.Wrong function selected 2.Control board damaged 3.Sensor fault	1. Select the correct function and try again 2, 3: Send to authorized service center
Rice or porridge does not boil for a long time	1.Control board damaged 2.Sensor fault	Send to authorized service center
Rice is undercooked or cooking takes too long	1.Not enough soaking or cooking time 2.Inner pot is not placed correctly 3.Control board damaged	1.Follow the instructions and use the correct water ratio 2.Make sure the inner pot is placed correctly 3.Send to authorized service center
Display E1	Bottom sensor error	Send to authorized service center
Display E2	Bottom sensor overheating or short circuit	Unplug the power and let it cool before reconnecting. If it still doesn't work, send to authorized service center

● Sorting Guide

Electrical and electronic equipment contains materials, components, and substances that can be hazardous and harmful to human health and the environment if waste from electrical and electronic equipment (WEEE) is not disposed of properly. Products labeled with the "crossed-out wheeled bin" are electrical and electronic equipment. The crossed-out wheeled bin symbol indicates that waste from electrical and electronic equipment must not be disposed of with unsorted household waste but must be collected separately. For this purpose, all municipalities have established collection schemes where waste from electrical and electronic equipment can be delivered free of charge by citizens at recycling stations or other collection points or picked up directly from households. Further information can be obtained from the municipality's technical administration.

