

Gladkokken

SLUSH ICE MAKER 2L

BRUKERGUIDE GK-7693

USERMANUAL GK-7693



VIKTIGE SIKKERHETSTILTAK**LES ALLE INSTRUKSJONER FØR BRUK AV APPARATET**

For å redusere risikoen for brann, eksplosjon, elektrisk støt eller personskade ved bruk av maskinen til frosne drikker, må du følge disse grunnleggende sikkerhetstiltakene:

1. Les alle instruksjoner før apparatet og dets tilbehør tas i bruk.
2. Følg alle advarsler og instruksjoner nøye. Enheten inneholder elektriske tilkoblinger og bevegelige deler som potensielt utgjør en risiko for brukeren.
3. Sjekk innholdet for å sikre at du har alle nødvendige deler til trygg og korrekt bruk av apparatet.
4. Etter første utpakking skal enheten stå oppreist i minst 2 timer før den tas i bruk, for at kjølemiddelets olje skal sette seg korrekt i kjølesystemet og sikre optimal ytelse.
5. Slå alltid av apparatet og trekk støpselet ut av kontakten når det ikke er i bruk, samt før montering, demontering og rengjøring.
6. Før bruk skal alle deler som kommer i kontakt med mat vaskes i henhold til instruksjonene i denne manualen.
7. IKKE BRUK apparatet hvis ledningen eller støpselet er skadet, eller hvis apparatet ikke fungerer som det skal, har blitt mistet eller på annen måte skadet. Apparatet inneholder ingen deler som brukeren selv kan reparere. Kontakt en autorisert forhandler for service.
8. Skjøteledninger må IKKE brukes sammen med dette apparatet.
9. For å beskytte mot elektrisk støt må apparatet IKKE senkes i væske, og ledningen må ikke komme i kontakt med noen form for væske.
10. IKKE la ledningen henge over kanten på bord eller benkeplater, da apparatet kan falle ned.
11. IKKE la enheten eller ledningen komme i kontakt med varme overflater som komfyrer eller andre varmeapparater.
12. Bruk ALLTID apparatet på en tørr og jevn overflate.
13. Bruk KUN det medfølgende tilbehøret og de medfølgende delene.
14. Hold hender, hår og klær borte fra beholderen under bruk.
15. Unngå kontakt med bevegelige deler under bruk og håndtering.
16. LA ALDRI apparatet være uten tilsyn under bruk.
17. Før bruk må du sørge for at alle redskaper er fjernet fra beholderne. Redskaper i beholderne kan forårsake skade og personskade.
18. ADVARSEL: IKKE bruk mikrobølgeovn på beholdere eller tilbehør.
19. ADVARSEL: Sørg ALLTID for at ventilasjonsåpninger i kabinettet eller den innebygde strukturen er fri for blokkering.
20. ADVARSEL: IKKE bruk mekaniske innretninger eller andre metoder for å fremskynde avriming, med mindre det er anbefalt av produsenten.
21. ADVARSEL: Ikke skad kjølekretsen.
22. ADVARSEL: Ikke bruk elektriske apparater inne i matoppbevaringsrom, med mindre det er godkjent av produsenten.
23. ADVARSEL: Ikke tilsett frosne frukter, frosne grønnsaker eller is i enheten.
24. ADVARSEL: Ikke tilsett varme ingredienser i enheten.
25. ADVARSEL: Motorbasen og kontrollpanelet må IKKE senkes i vann eller andre væsker.
26. ADVARSEL: Ikke fyll beholderen over MAX Fyll-linjen.
27. ADVARSEL: Ikke prosesser harde, løse ingredienser eller is. Apparatet er ikke laget for løse frosne frukter, isblokker eller isbiter.

28. Hold ALLTID enheten oppreist.
29. Dette apparatet kan brukes av barn fra 8 år og oppover og personer med redusert fysisk, sensorisk eller mental kapasitet eller mangel på erfaring og kunnskap, dersom de har fått veiledning eller opplæring i hvordan apparatet brukes på en trygg måte og forstår farene som er involvert. Barn skal ikke leke med apparatet. Rengjøring og brukervedlikehold skal ikke utføres av barn uten tilsyn.
30. Sørg for at baksiden og sidene av enheten er åpne, slik at kompressoren kan fungere korrekt uten overoppheting.
31. Hold ventilasjonsåpninger i kabinettet eller den innebygde strukturen fri for blokkering.
32. ADVARSEL: IKKE bruk mekaniske innretninger eller andre midler for å fremskynde avriming, med mindre det er anbefalt av produsenten.
33. Ikke skad kjølekretsen. Denne advarselen gjelder kun apparater med tilgjengelig kjølekrets.
34. Ved bruk må du sørge for at begge sider og baksiden av enheten er minst 10,2 cm (fire tommer) fra vegger.
35. Ikke oppbevar eksplosive stoffer som spraybokser med brannfarlig drivmiddel i dette apparatet.
Dette apparatet er beregnet til bruk i husholdninger og lignende applikasjoner, for eksempel:
personalekjøkken i butikker, kontorer og andre arbeidsmiljøer;
gårdshus og av kunder på hoteller, moteller og andre boligmiljøer;
bed & breakfast-miljøer;
catering og lignende ikke-detaljhandelsbruk.
36. For å unngå forurensning av mat, vennligst følg disse instruksjonene:
— Rengjør jevnlig overflater som kan komme i kontakt med mat, samt tilgjengelige dreneringsystemer.
— Rengjør vanntanker hvis de ikke har vært brukt på 48 timer.
Hvis tilførselskabelen er skadet, må den byttes ut av produsenten, dens serviceverksted eller en tilsvarende kvalifisert person for å unngå fare.
37. Korrekt avhending av dette produktet
Dette merket indikerer at dette produktet ikke skal kastes sammen med annet husholdningsavfall innenfor EU. For å forhindre mulig skade på miljøet eller menneskers helse ved ukontrollert avfallshåndtering, skal det resirkuleres på en ansvarlig måte for å fremme bærekraftig gjenbruk av materialressurser. For å returnere din brukte enhet, vennligst bruk retur- og innsamlingssystemene eller kontakt forhandleren der produktet ble kjøpt. De kan ta imot dette produktet for miljømessig sikker resirkulering.



NO




ADVARSEL:


Fare for brann / brannfarlige materialer


- Når apparatet plasseres, sørg for at strømledningen ikke blir klemt eller skadet.
- **PLASSER IKKE** flere flyttbare grenuttak eller bærbar strømtilførsel bak apparatet.
- Ved håndtering, installasjon og bruk av apparatet må det utvises forsiktighet for å unngå skade på kjølemiddelløp.
- Kast kjøleskapet i henhold til nasjonale og lokale bestemmelser. Kjølemiddelet og isolasjonsmaterialet som brukes i dette produktet krever spesialhåndtering. Kontakt lokale myndigheter for miljøvennlig avhending.

DETLISTE

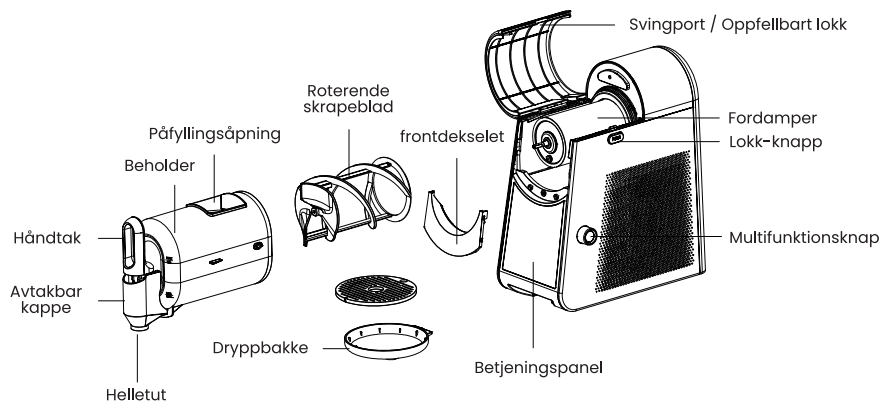

BRUK AV KONTROLLPANELET

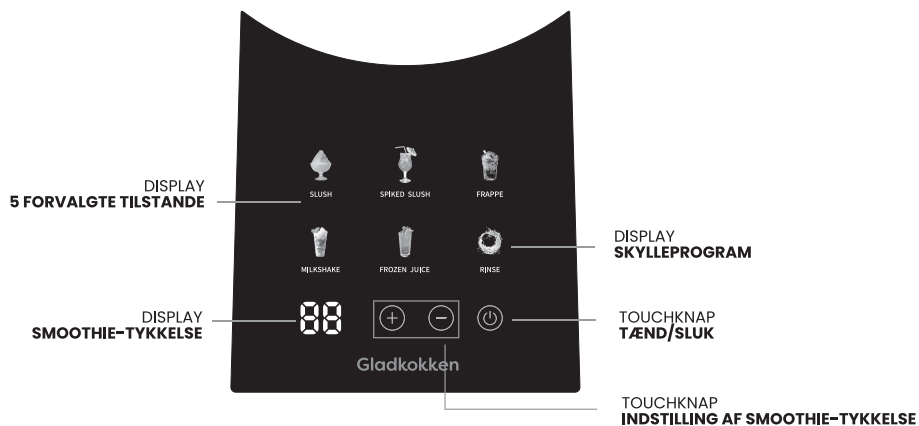

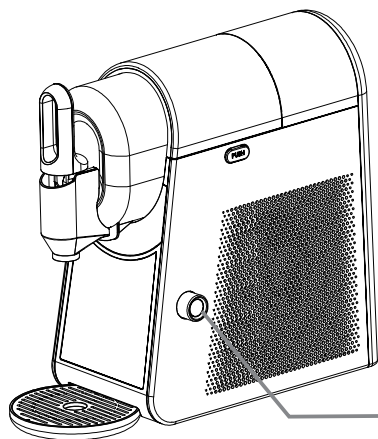

Multifunktionsknapp

Nominell spenning: 220-240V ~
 Nominell frekvens: 50Hz
 Nominell effekt: 200w
 Standby-strøm: Produktet automatisk
 går inn i standby-modus 3 minutter etter
 Stopp av drift (standby-effekt $\leq 0.3W$).
 Vekt kjølemiddel: R290 (25g)

Betjening av Multifunktionsknapp

- **Velg funksjon:** Drei knappen med eller mot klokken for å bla gjennom de 5 forhåndsinnstilte modusene og SKYLLEPROGRAMMET.
- **Aktiver funksjon:** Trykk på knappen for å starte valgt funksjon.
- **Pause/Gjenoppta:** Trykk på knappen igjen for å sette på pause; trykk enda en

gang for å gjenoppta.

- **Bytt funksjon:** Drei knappen når som helst for å velge ny modus mens enheten er i pause.

Innstilling av smoothie-tykkelse + / -

- **Reduser tykkelsen** ved å trykke på “-” på kontrollpanelet.
- **Øk tykkelsen** ved å trykke på “+” på kontrollpanelet.

FORHÅNDSINNSTILTE MODUSER

MODUS	STANDARDTEMP	DESIGNET FOR	EKSEMPLER	UNNGÅ
SLUSH	2	Forvandle dine hverdagsdrikker	Brus, limonade	Lett-brus (f.eks. diet soda)
SLUSH MED ALKOHOL	9	Drikker med alkoholinhold	Margarita, rosé	
FRAPPÉ	2	Kaffeelskere, som vil lage isdrikk	Ferdigkjøpt frappé	Svart kaffe, usøtet kaffe
MILKSHAKE	4	Melke- og fløtebaserte drikker	Sjokolademelk, smoothie	Usøtet melk
FROSSEN JUICE	2	Naturlig søtede drikker	Appelsinjuice, eplecider	Juice med fruktkjøtt

SKYLLEPROGRAM

- Dette programmet rører innholdet uten å kjøle, for å skylle enheten.

KREKET SUKKERINNOLD

MERK: For lite sukker eller for mye alkohol vil forhindre korrekt frysing og dermed slush-konsistens.

Alle ingredienser må inneholde minst **4 % sukker**.

ALKOHOLPROSENT

Sørg for at oppskriftens totale alkoholinhold ligger mellom **2,8 % og 16 %**.

FØR FØRSTE BRUK

LES ALLE INSTRUKSJONER FØR DU BRUKER APPARATET

1. Fjern alt emballasjemateriale fra enheten.
2. Vask alle deler i varmt såpevann.
3. Skyll grundig og la alle deler lufttørke.
4. Tørk kontrollpanel, motorbase og fordampner med en myk klut. La det tørke helt før bruk.
5. Plasser enheten på kjøkkenbenken i minst 2 timer før oppstart. Dette gir kjølemiddelet tid til å sette seg i kondensatoren og sikrer optimal og trygg bruk.

MERK: Alt tilbehør er **BPA-fritt**. Tilbehøret tåler oppvaskmaskin, men må IKKE rengjøres med oppvaskmaskinens varme tørkefunksjon..

PLEIE & VEDLIKEHOLD

BRUK AV SKYLLEPROGRAMMET

1. Hell ut eventuelle rester av den frosne drikken.
2. Stopp det gjeldende forhåndsinnstilte programmet. Velg SKYLLEPROGRAM.
3. Tilsett varmt vann opp til MAX FYLL-linjen i beholderen.
4. Hell sakte ut vannet fra enheten med en gang etter påfylling.
5. Stopp SKYLLEPROGRAMMET ved å trykke på multifunksjonsknappen.
6. Trykk på på/av-knappen for å slå av

enheten.

DEMONTERING & RENGJØRING

1. Åpne topplokket, løft beholderen forsiktig opp fra enheten for å frigjøre den fra sporet, og fjern den deretter horisontalt. Pass på at beholderen holdes nedoverbøyd for å unngå at restvæske søler. Legg den til side.
2. Skyv skruen (snegle) av fordampneren. Sett til side.
3. Tørk av fordampneren med en desinfisert eller varm, fuktig klut.
4. Trekk forsiktig ut kondensoppsamlere – det kan være resterende væske. Sett til side.
5. Tørk av enheten under fordampneren med en desinfisert eller varm, fuktig klut.
6. Fjern dryppbrett og/eller tut og lokk ved behov.
7. Vask alle deler for hånd med varmt såpevann.
8. Tørk av motorbasen med en desinfisert eller varm, fuktig klut.
9. La alle deler tørke helt før du setter enheten sammen igjen og/eller lagrer den.
10. Etter hver bruk: Fjern frontdekselet for rengjøring. Bruk en børste til å rense fordampneren og vanntilførselsrøret. Etter rengjøring, monter frontdekselet på nytt før neste bruk.

VEDLIKEHOLD

1. Oppbevar enheten oppreist, og oppbevar alle deler samlet.
2. Når enheten flyttes, løft den fra bunnen av motorbasen.
3. IKKE oppbevar ingredienser i beholderen.

FEILKODER & FEILSØKING

Når enheden støder på et problem, vil displayet vise en feilkode, der angiver det specifikke problem:

Feilkode	Beskrivelse
E2	Motor stoppet,beholder ikke installert.
E3	For lavt sukker- og alkoholinnhold
E4	For høyt sukker- og alkoholinnhold
E5	Feil ved helling av maskinen
E6	NTC åpen krets
E7	NTC kortslutning
E8	NTC høy temperatur

LAV-SUKKER VARSEL

Temperaturkontrollen synker og piper. Feil E3

Løsning:

Tilsett 1–2 ss sukker/juice per porsjon. Trykk på exit-knappen, og trykk deretter på start.


HØY-ALKOHOL/SUKKER VARSEL

Temperaturkontrollen stiger og piper. Feil E4

Løsning:

Fortynn med 60 ml vann per porsjon. Trykk på exit-knappen, og trykk deretter på start.

KRETSLØPSDIAGRAM

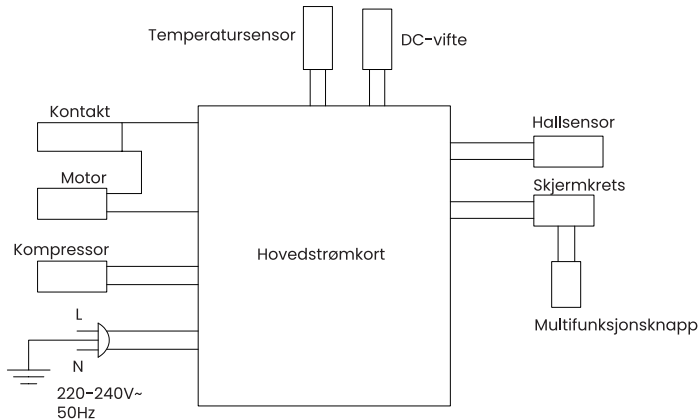

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS
IMPORTANT SAFEGUARDS
READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE

To reduce the risk of fire, explosion, electric shock or injury when using your frozen drink maker, follow these basic safety precautions:

1. Read all instructions prior to using the appliance and its accessories.
2. Carefully observe and follow all warnings and instructions. This unit contains electrical connections and moving parts that potentially present risk to the user.
3. Take inventory of all contents to ensure you have all parts needed to properly and safely operate your appliance.
4. After unboxing the unit for the first time, ensure the unit is upright for at least 2 hours before operating to let the refrigerant oils settle in the air conditioning system for best performance.
5. Turn the appliance OFF, then unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
6. Before use, wash all parts that may contact food. Follow washing instructions covered in this instruction manual.
7. DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damage in any manner. This appliance has no user-serviceable parts. If damaged, contact authorized dealer for servicing.
8. Extension cords should NOT be used with this appliance.
9. To protect against the risk of electric shock, DO NOT submerge the appliance or allow the power cord to contact any form of liquid.
10. DO NOT allow the cord to hang over the edges of tables or counters. The cord may become snagged and pull the appliance off the work surface.
11. DO NOT allow the unit or the cord to contact hot surfaces, including stoves, and other heating appliances.
12. ALWAYS use the appliance on a dry and level surface.
13. ONLY use attachments and accessories that are provided with the product.
14. Keep hands, hair, and clothing out of the container when loading and operating.
15. During operation and handling of the appliance, avoid contact with moving parts.
16. NEVER leave the appliance unattended while in use.
17. Before operation, ensure all utensils are removed from containers. Failure to remove utensils can cause containers to shatter and potentially result in personal injury and property damage.
18. WARNING: DO NOT microwave the containers or accessories provided with the appliance.
19. WARNING: ALWAYS keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
20. WARNING: DO NOT use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
21. WARNING: DO NOT damage the refrigerant circuit.
22. WARNING: DO NOT use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
23. WARNING: DO NOT add frozen fruit, frozen vegetables, or ice to the unit.
24. WARNING: DO NOT add hot ingredients to the unit.

25. **WARNING:** DO NOT submerge the motor base or control panel in water or other liquids.
26. **WARNING:** DO NOT fill vessel past the MAX FILL line.
27. **WARNING:** DO NOT process hard, loose ingredients or ice. This appliance is not intended to process loose frozen fruit, a block of solid ice, or ice cubes.
28. **ALWAYS** keep the unit upright.
29. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
30. Keep rear and sides of the unit open in order for the compressor to operate properly and not over heat.
31. Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
32. **WARNING:** DO NOT use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
33. **DO NOT** damage the refrigerant circuit. This warning is applicable only for appliances with refrigerating circuits that are accessible by the user.
34. When using appliance, make sure both sides and back of it are at least four inches (10.2 cm) away from walls.
35. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance. This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.
36. To avoid contamination of food, please respect the following instructions:
 - Clean regularly surfaces that can come in contact with food and accessible drainage systems.
 - Clean water tanks if they have not been used for 48 h.If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
37. **Correct Disposal of this product**
This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.






WARNING: Risk of fire / flammable materials

WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged. DO NOT locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.


WARNING: When handling, installing, and operating the appliance, care should be taken to avoid damage to the refrigerant tubing.


WARNING: Dispose of refrigerator in accordance with Federal and Local Regulations. The flammable refrigerant and insulation material used in this product require special disposal procedures. Contact your local authorities for the environmentally safe disposal of your refrigerator.

PARTS

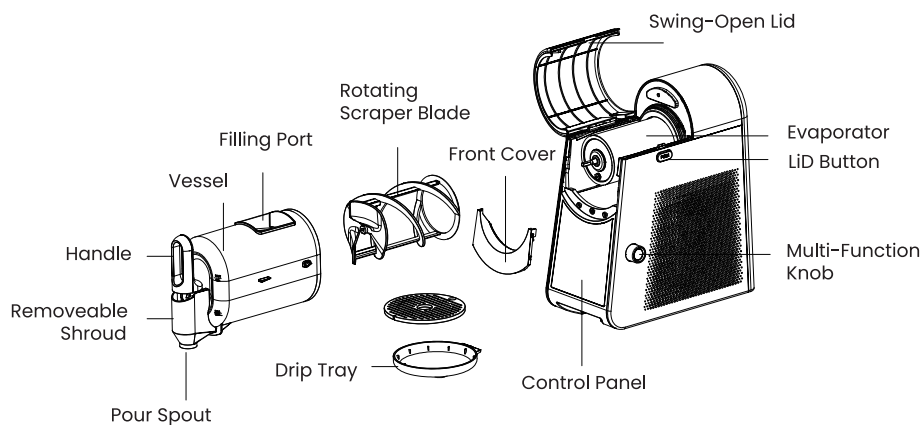

USING THE CONTROL PANEL

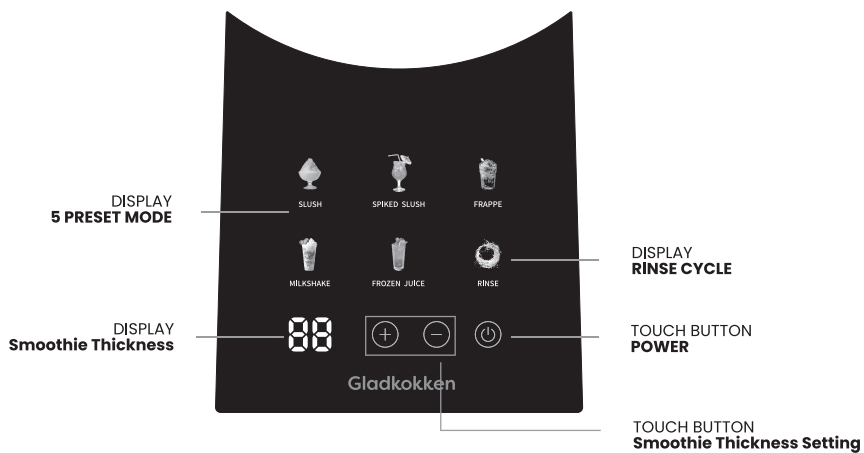

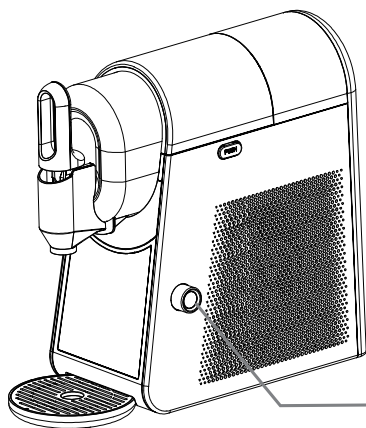

Multi-Function Knob

Rated Voltage:220~240V~
 Rated Frequency:50Hz
 Rated Power:200W
 Standby Power:The product automatically enters standby mode 3 minutes after stopping operation (standby power $\leq 0.3W$).
 Refrigerant Weight:R290 (25g)

Multi-Function Knob Operation

Select Function: Turn the knob clockwise

- or counterclockwise to browse 5 Preset Modes and RINSE CYCLE.

Activate Function: Press the knob to

- start the selected function.

Pause/Resume: Press the knob again to

- pause; press once more to resume.

- Switch Functions: Rotate the knob at any time to choose a new mode while paused.

Smoothie Thickness Control Setting + / -

- Decrease the thickness level by pressing the “-” on the control panel.
- Increase the thickness level by pressing the “+” on the control panel.

PRESET MODES

MODE	DEFAULT TEMPERA-	DESIGNED FOR	EXAMPLES	DO NOT
SLUSH	2	Transforming your everyday beverages	Soda, lemonade	Diet Sodas
SPIKED SLUSH	9	Beverages with alcohol content	Margarita, rosé	
FRAPPE	2	Coffee shop lovers to make frozen treats	Store-bought frappé	Black coffee, Unsweetened Coffee
MILKSHAKE	4	Dairy- and creamier-based beverages	Chocolate milk, blended milkshake	Unsweetened milk
FROZEN JUICE	2	Naturally sweetened beverages	Orange juice, apple cider	Juice with pulp

RINSE CYCLE

- This cycle agitates, without cooling, to rinse the unit.

REQUIRED SUGAR CONTENT: NOTE: Too little sugar or too much alcohol will prevent proper freezing of a slush output. All inputs must contain at least 4% sugar.

ALCOHOL PERCENTAGES

Ensure your recipe's total alcohol content is between 2.8% and 16% alcohol.

BEFORE FIRST USE**READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE**

1. Remove all packaging materials from the unit.
2. Wash all parts in warm, soapy water.
3. Thoroughly rinse and air-dry all parts.
4. Wipe control panel, motor base, and evaporator with a soft cloth. Allow to dry completely before using.
5. Place the unit on countertop for at least hours before operating. This allows the refrigerant to settle in the condenser for optimal and safe use.

NOTE: All attachments are BPA free. Accessories are dishwasher safe but should NOT be cleaned with a heated dry cycle.

**CARE & MAINTENANCE
USING THE RINSE CYCLE**

1. Dispense any remaining frozen drink.
2. Stop the current preset. Select the RINSE CYCLE.
3. Add warm water up to the vessel's max fill line.
4. Slowly dispense the water from the unit immediately after filling.
5. Stop RINSE CYCLE by pressing the Multi-Function Knob.
6. Press the power button to turn the unit off.

DISASSEMBLY & CLEANING

1. Open the top cover, gently lift the container up from the device to disengage it from the groove, then remove it horizontally. Make sure the container is tilted downward to prevent residual liquid. Set it aside.
2. Slide the auger off the evaporator. Set aside.
3. Wipe down the evaporator with a sanitized or warm, damp cloth.
4. Gently slide the condensation catch out of the unit, since there may be residual liquid in the condensation catch. Set aside.
5. Wipe down unit underneath the evaporator with a sanitized or warm, damp cloth.
6. If needed, remove the drip tray and/or spout shroud.
7. Hand-wash all parts in warm, soapy water.
8. Wipe down the motor base with a sanitized or warm, damp cloth.
9. Allow all parts to dry thoroughly before reassembling and/or storing the unit.
10. After each use, remove the front cover for cleaning. Use a brush to clean the evaporator and the water inlet pipe. After cleaning, reinstall the front cover before using again.

MAINTENANCE

1. Store the unit upright and store all parts assembled.
2. When moving the unit, lift from the bottom of the motor base.
3. DO NOT store ingredients inside the vessel.

Error Code & Troubleshooting

When the unit encounters an issue, the display will present an error code to indicate the specific problem.The error codes and their corresponding descriptions are as follows:

Error Code	Descriptions
E2	Motor stopped,vessel not installed.
E3	Low sugar and low alcohol
E4	High sugar and high alcohol content
E5	Machine tilting malfunction
E6	NTC open circuit
E7	NTC short circuit
E8	NTC high temperature

LOW-SUGAR ALERT

DESCENDING TEMPERATURE CONTROL UNIT BEEPS.Error E3

HOW TO FIX:

ADD 1- 2 TBSP SUGAR/JUICE PER SERVING. Press the exit button, then press start.


HIGH-ALCOHOL/SUGAR ALERT

ASCENDING TEMPERATURE CONTROL . UNIT BEEPS.Error E4

HOW TO FIX:

DILUTE WITH 60ML WATER PER SERVING .Press the exit button, then press start.

CIRCUIT DIAGRAM

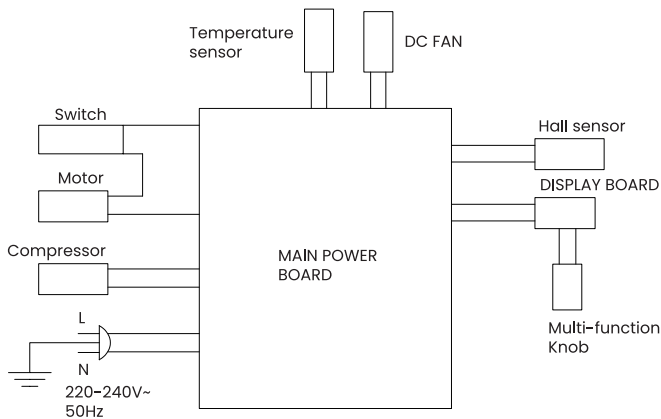

Stock Group Norway AS
Adress:c/o Granada Sørliøvelen 118 1788 Halden
www.stockgroup.dk